











## What to do if... What to do if...

	A tire punctures	P. 531/ 541	If you have a flat tire
	The engine does not start	P. 84 P. 542 P. 548	Immobilizer system If the engine will not start If the 12 volt battery is discharged
	The shift lever cannot be moved out	P. 543	If the shift lever cannot be shifted from "P"
	The engine coolant temperature gauge enters the red zone	P. 552	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 544	If you lose your keys
	The 12 volt battery runs out	P. 548	If the 12 volt battery is discharged
	The doors cannot be locked	P. 44	Doors
	The horn begins to sound	P. 86	Alarm
	The vehicle is stuck in mud or sand	P. 555	If the vehicle becomes stuck



The warning light or indicator light comes on

P. 507

If a warning light turns on or a warning buzzer sounds...



#### Warning lights



Brake system warning light

or



P. 507



Malfunction indicator lamp

or



P. 508



ABS warning light

or



P. 508



Driver's seat belt reminder light

P. 509



Front passenger's seat belt reminder light

P. 509



ECB\* warning light

P. 508



Tire pressure warning light

P. 509



Low fuel level warning light

P. 509



Electric power steering warning light

P. 508



SRS warning light

P. 508



Pre-collision system warning light

P. 508



Open door warning light

P. 509



Slip indicator

P. 508



Charging system warning light

P. 507



Master warning light

P. 510

\*: Electronically Controlled Brake System

## What to do if...



The warning message is displayed

P. 516

If a warning message is displayed

What to do if...

